
Sheet 1/8

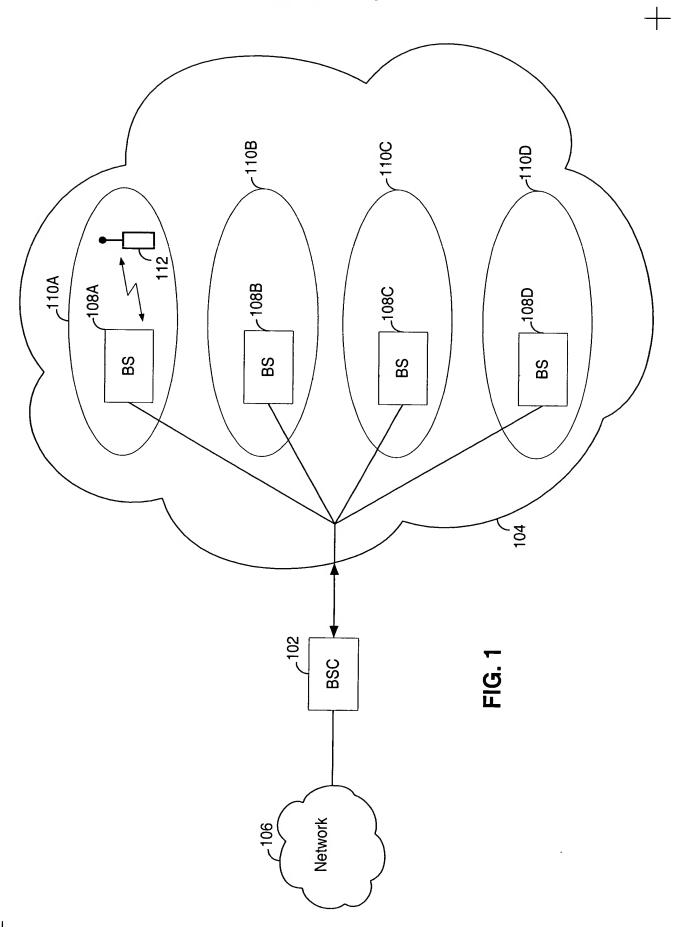

SS 112 BS **TRANSMITTER** -208 -210 CHANNEL ELEMENT DATA QUEUE BSC 7202 CALL PROCESSOR SELECTOR ELEMENT SCHEDULER Network


FIG. 2

020618; BLESSENT et al. **Sheet 3/8**

				· · · · · · · · · · · · · · · · · · ·								· · · · · ·	,				
		0123	4567	1 8901	1111 2345	1111 6789	2222 0123	2222 4567	2233 8901	3333 2345	3333 6789	4444 0123	4444 4567	4455 8901	5555 2345	5555 6789	6666 0123
302	0 1 2 3	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110
	4 5 6 7	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001
	8 9 10 11	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001
306	12 13 14 15	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110
	16 17 18 19	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	1111 1010 1100 1001	1111 1010 1100 1001
	20 21 22 23	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110
	24 25 26 27	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110
309	28 29 30 31	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001
	32 33 34 35	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001							
	36 37 38 39	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110
	40 41 42 43	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110
308	44 45 46 47	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001
	48 49 50 51	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110							
	52 53 54 55	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001
	56 57 58 59	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001
	60 61 62 63	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110	0000 0101 0011 0110	1111 1010 1100 1001	0000 0101 0011 0110	1111 1010 1100 1001	1111 1010 1100 1001	0000 0101 0011 0110


FIG. 3

Sheet 4/8

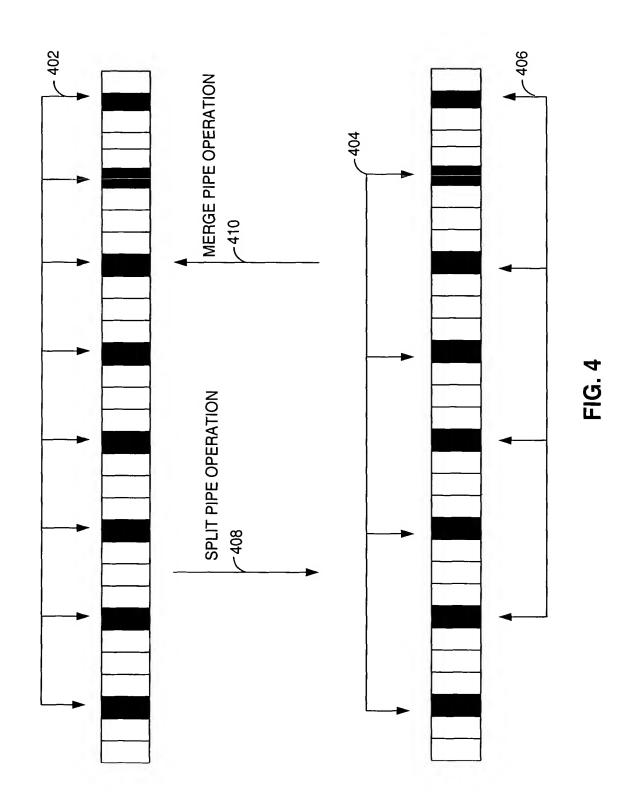

; •

Sheet 5/8

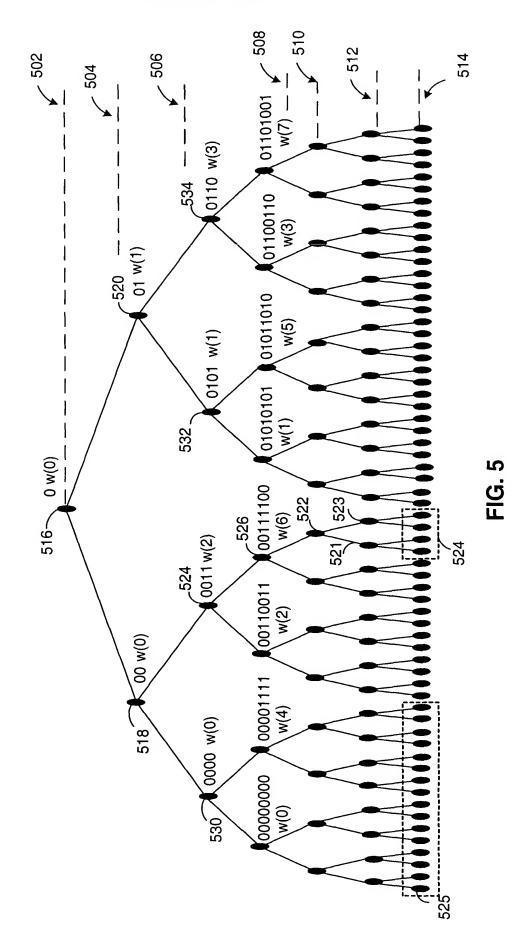

Sheet 6/8


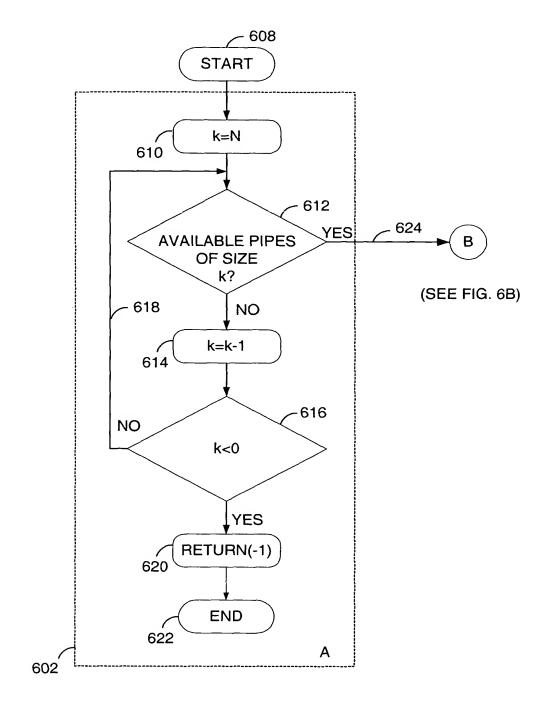


FIG. 6A

Sheet 7/8

(FROM FIG.6A)

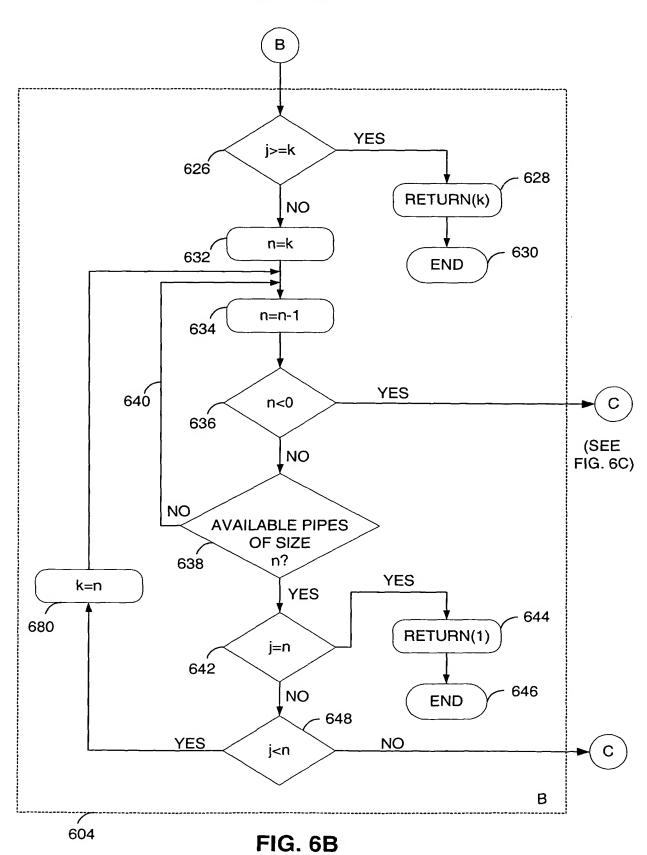

(FROM FIG.6B)

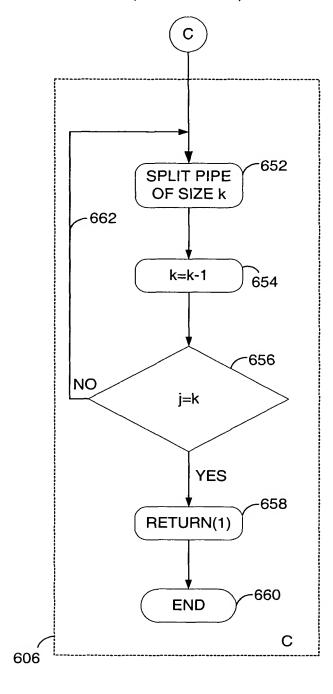


FIG. 6C